



# REMOTE™ 3


## Assembly Instructions

### PACKAGE INCLUDES:

Frame assembly, tent body, rainfly, stakes


## 1 PREPARE FOR SETUP

1. Stake out four corners tightly.

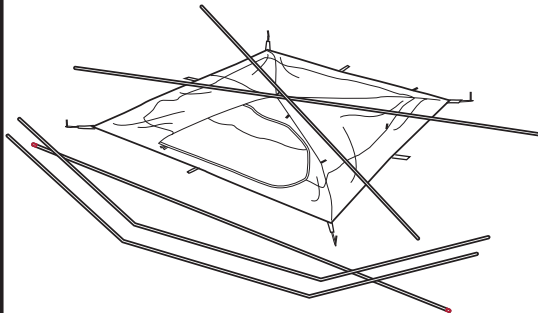


## 2 ASSEMBLE TENT FRAME

1. Insert pole tips of main frame into floor grommets at corners.
2. Attach clips.

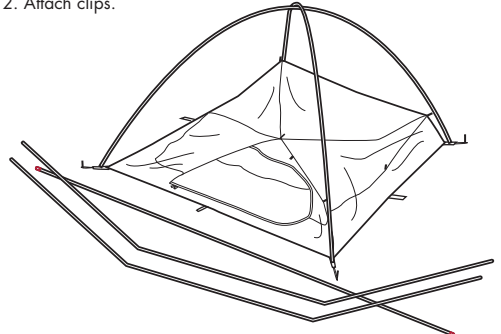

## 3 ATTACH CROSS POLE

1. Place cross pole under main frame and insert pole tips into mid grommets.
2. Attach clips.
3. Place clip below red washer.

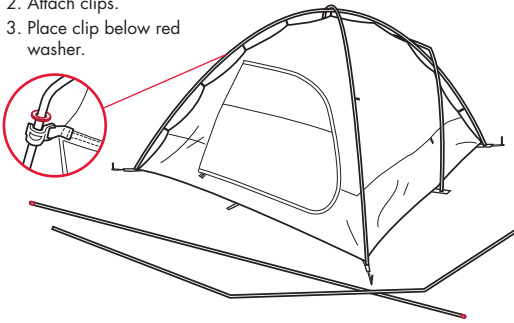

## 4 ATTACH RAINFLY

1. Insert vestibule pole (red tips) into rainfly vestibule sleeve.
2. Lay rainfly over tent and align seams.
3. Stretch out vestibule till taut, stake down.



**USE TIPS:** All tents require staking; unsecured tents are susceptible to wind damage. In some conditions, additional stakes and cord may be required. Re-adjustment of stakes and rainfly may be necessary to keep tent tight and weatherproof.



© 2021 Cascade Designs, Inc.  
4000 First Avenue South  
Seattle, WA 98134 USA  
1-800-531-9531 | 1-206-505-9500